
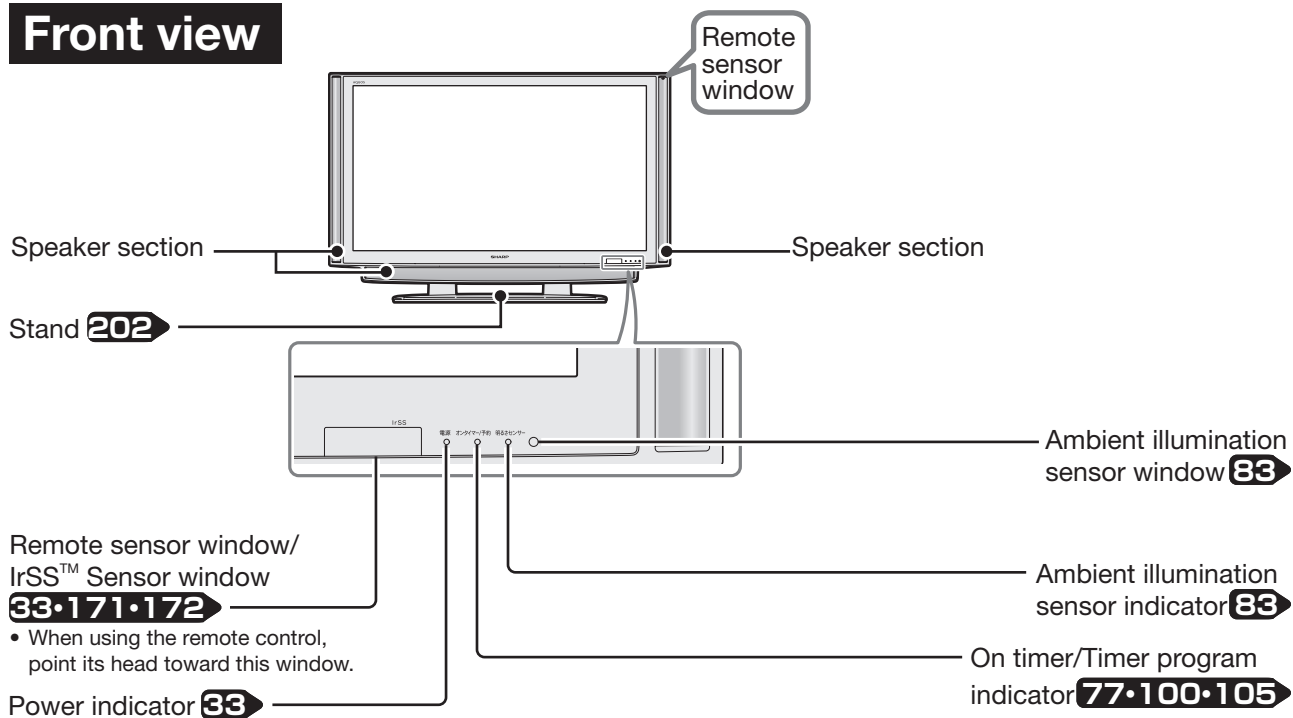
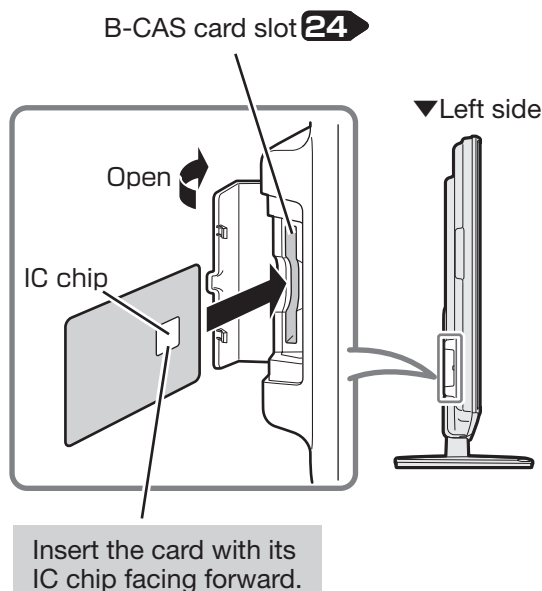


- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


## Front view




## Side view



### Opening the terminal covers

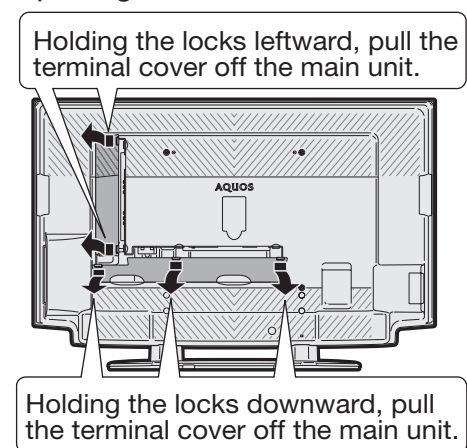

## Back view

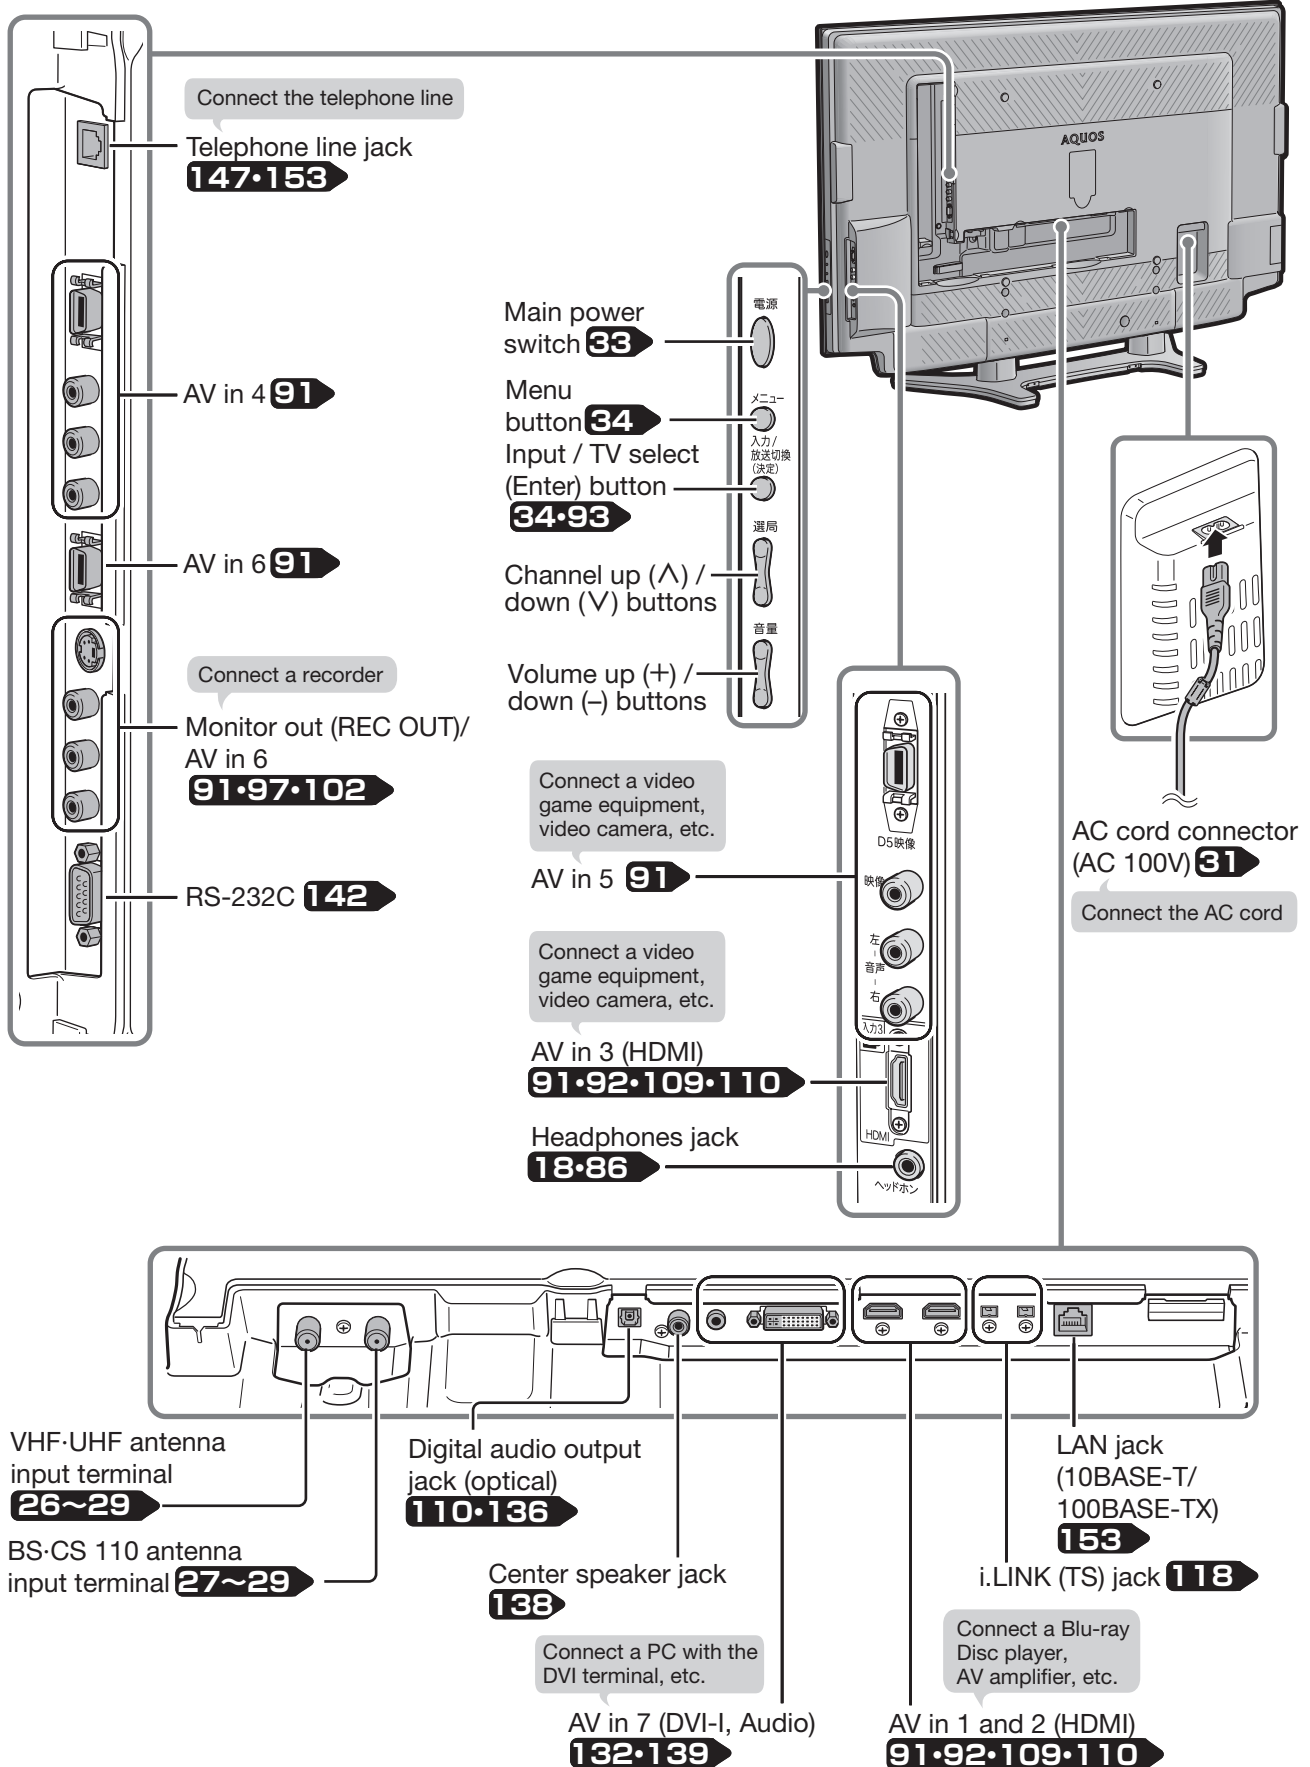

はじめに

準備

番組を見る

他の機器で  
録画・再生

ファミリンク  
で録画・再生

本機の機能の  
活用

インターネット  
を楽しむ

写真の表示と  
印刷

故障かな・仕様・  
寸法図など

English  
Guide

# Part Names – Remote Control Unit

## Active/Standby **33**

Press to engage the TV set in the active or standby mode.

CATV

## CATV **63**

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

3桁入力

## Digital channel number input **63**

Use to select a digital channel by entering the 3-digit channel number.

## 地上A Terrestrial analog select **60**

## 地上D Terrestrial digital select **60**

## BS BS select **60**

## CS CS select **60**

Select the CS digital channel for the first time. **39**

## 消音 Mute **61**

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

## + 音量 (+)/down (-) **61**

Press to adjust the volume.

## Linked data broadcast **76**

Press to call the data broadcast linked with the current digital TV program.

## AV mode select **81**

Press to select the picture/sound setting that best matches the current program.

## 番組表 EPG **66・68**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

## 裏番組 Other on-air programs **67**

Press to display the EPG for currently on-air programs only (裏番組).

番組情報

## Program info **76**

Press to display detailed information on the current digital program.

## Finish **34**

Press to finish menu operation, etc.

\* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

お好み選局

## Favorite channel select/register **63**

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

映像切換

## Picture select **73**

Press to select the desired picture when watching a digital multi-picture program.

字幕

## Caption **73**

Press to display, select, or turn off captions when watching a digital program with captions.

音声切換

## Audio select **72・73**

Press to select the desired audio.

## Familink **112・114~117**

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

画面表示

## Display **62**

Press to display or turn off the channel call, etc.

画面サイズ

## Screen mode **79・133**

Press to select the desired screen mode.

AQUOS.jp

## AQUOS.jp **156**

Press to connect to the internet.

i.LINK

## i.LINK **120**

Press to display the i.LINK control panel.

## Channel select **61**

- Press to select a channel.
- Use to input a number for various settings.

選局

## Channel up (^)/down (v) **61**

Press to select channels in the current network, media and CATV channels in the ascending or descending order.

\* CATV channels are factory set to be skipped.

入力切換

## Input select **93**

Press to select the desired input.

## Media select **60**

Press to select the desired media (TV or data).

## Sleep timer **178**

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

## Menu **34**

Press to display or turn off the menu screen.

The menus can be displayed in English. See **213** for instructions on how to switch the display language.

## Cursor (up, down, left, right) **34**

Use to select a menu item, column, etc.

## 決定 Enter/Confirm **34**

Press to confirm a selected setting or menu item.

## Return **34**

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

青 赤 緑 黄

## Color **68・69・76**

Use to operate EPGs and data program screens.

静止

## Freeze **75**

Press to freeze the picture.

2画面

## Split screen **74**

Press to switch between the split screen mode and the normal screen mode.


操作切換

## Operable screen **74**

Press to switch the operable screen when the TV set is in the split screen mode.

## To open the cover

Hold the cover by the projections on both sides and lift upwards.

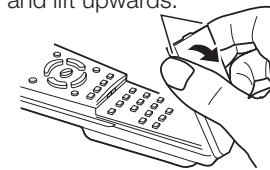

# Switching the Display Language to English メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。




## おしらせ


誤ってメニューを英語にしてしまったときは

- ・メニューから「Setup」－「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

- Press** **メニュー** ● Display the menu screen.  
メニューを表示する
- 決定** ● Select “ 本体設定 ”(Setup) — “Language (言語設定)”.  
「本体設定」－「Language (言語設定)」を選ぶ  
**決定** Enter.  
決定する

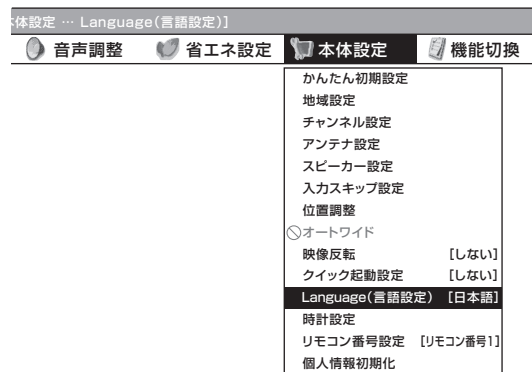

- 決定** ● Select “English”.  
「English」を選ぶ  
**決定** Enter.  
決定する

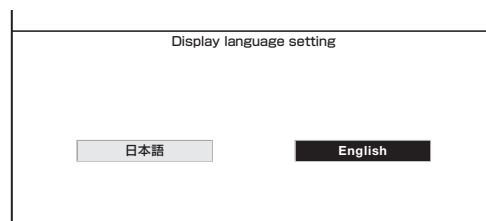

- The menu screen is now displayed in English.
- 画面表示が英語になります。

- 終了** ● Finish this operation.  
終了する

はじめに

準備

番組を見る

他の機器で  
録画・再生

ファミリンク  
で録画・再生

本機の機能の  
活用

インターネット  
を楽しむ

写真の表示と  
印刷

故障かな・仕様・  
寸法図など

English  
Guide